





Attention:
Drill a small hole in the plastic cap to
release the air.

Oil gauge for GL1000